




Assembly Instructions

Wunderbars constant tension stretcher bars are even easier than standard stretcher bars to construct and stretch. With Wunderbars there is no need to measure the frame to get it square or have to constantly hit the frame with a mallet.....it's always square. With Wunderbars there is no complicated or overpriced stretching systems, machinery or devices.....all you need is a staple gun, and with Wunderbars, there's no more sagging canvas...its always tight and will contract and expand to the rooms atmosphere.

Designed and made to follow on from traditional stretcher bars and stretching techniques the Wunderbars have been made for photographers and framers from the hobbyist to the production canvas framer. Its quicker than traditional stretching and will give the big stretching machinery a run for its money!!

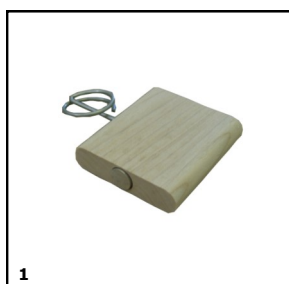


1. Spring blocks come ready to go and are preset ready for the firing pin to be released.




2. Slot the spring block into the bar.




3. Ready the bar on a flat surface to accept the next bar.

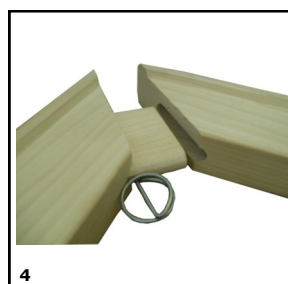


4. Slot the bars together as shown.

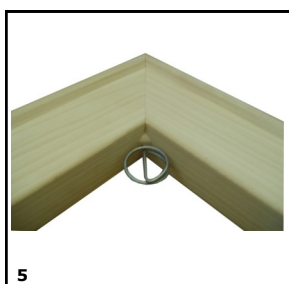


5. Repeat for all 4 bars.

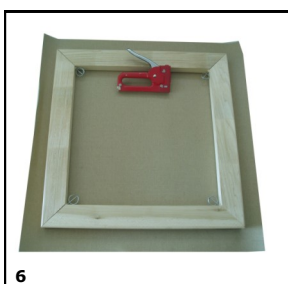


6. Ready for stretching. Use 6mm staples and staple gun.

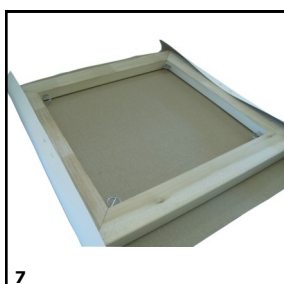


7. Stretch by your normal method of stretching. No need to use pliers or any stretching machinery. Just staple to the frame.

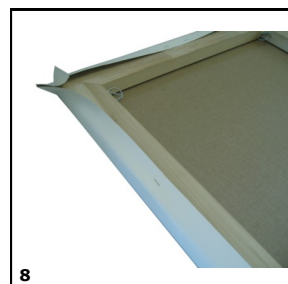


8. Corners can be done in your preferred way. Remember always make sure that staples do not cross the mitre join.

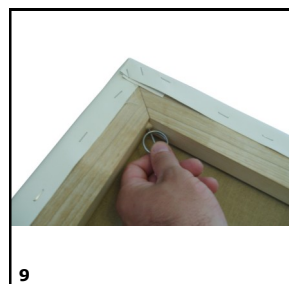


9. Hold the pin firmly when removing. Use pliers if slightly stiff or tight.

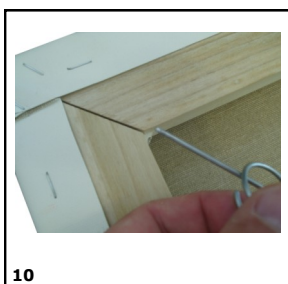

10. Frame will start to expand on pin removal.

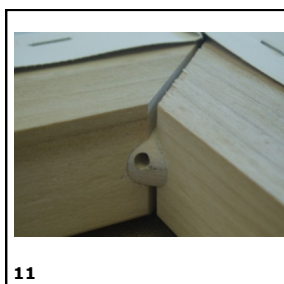

11. Pulling corners apart or tapping the centre of the bars will speed up the expansion of the bars.

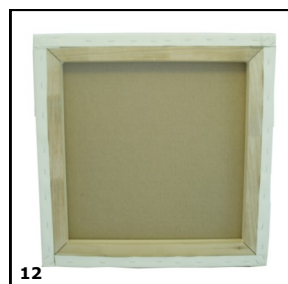

12. That's it! The canvas will now stay under constant tension and expand and contract to the environment that they are hung.